
25 12

Installation method for 3D panels using **KNAUF CD profiles and KEKU AD fasteners.**

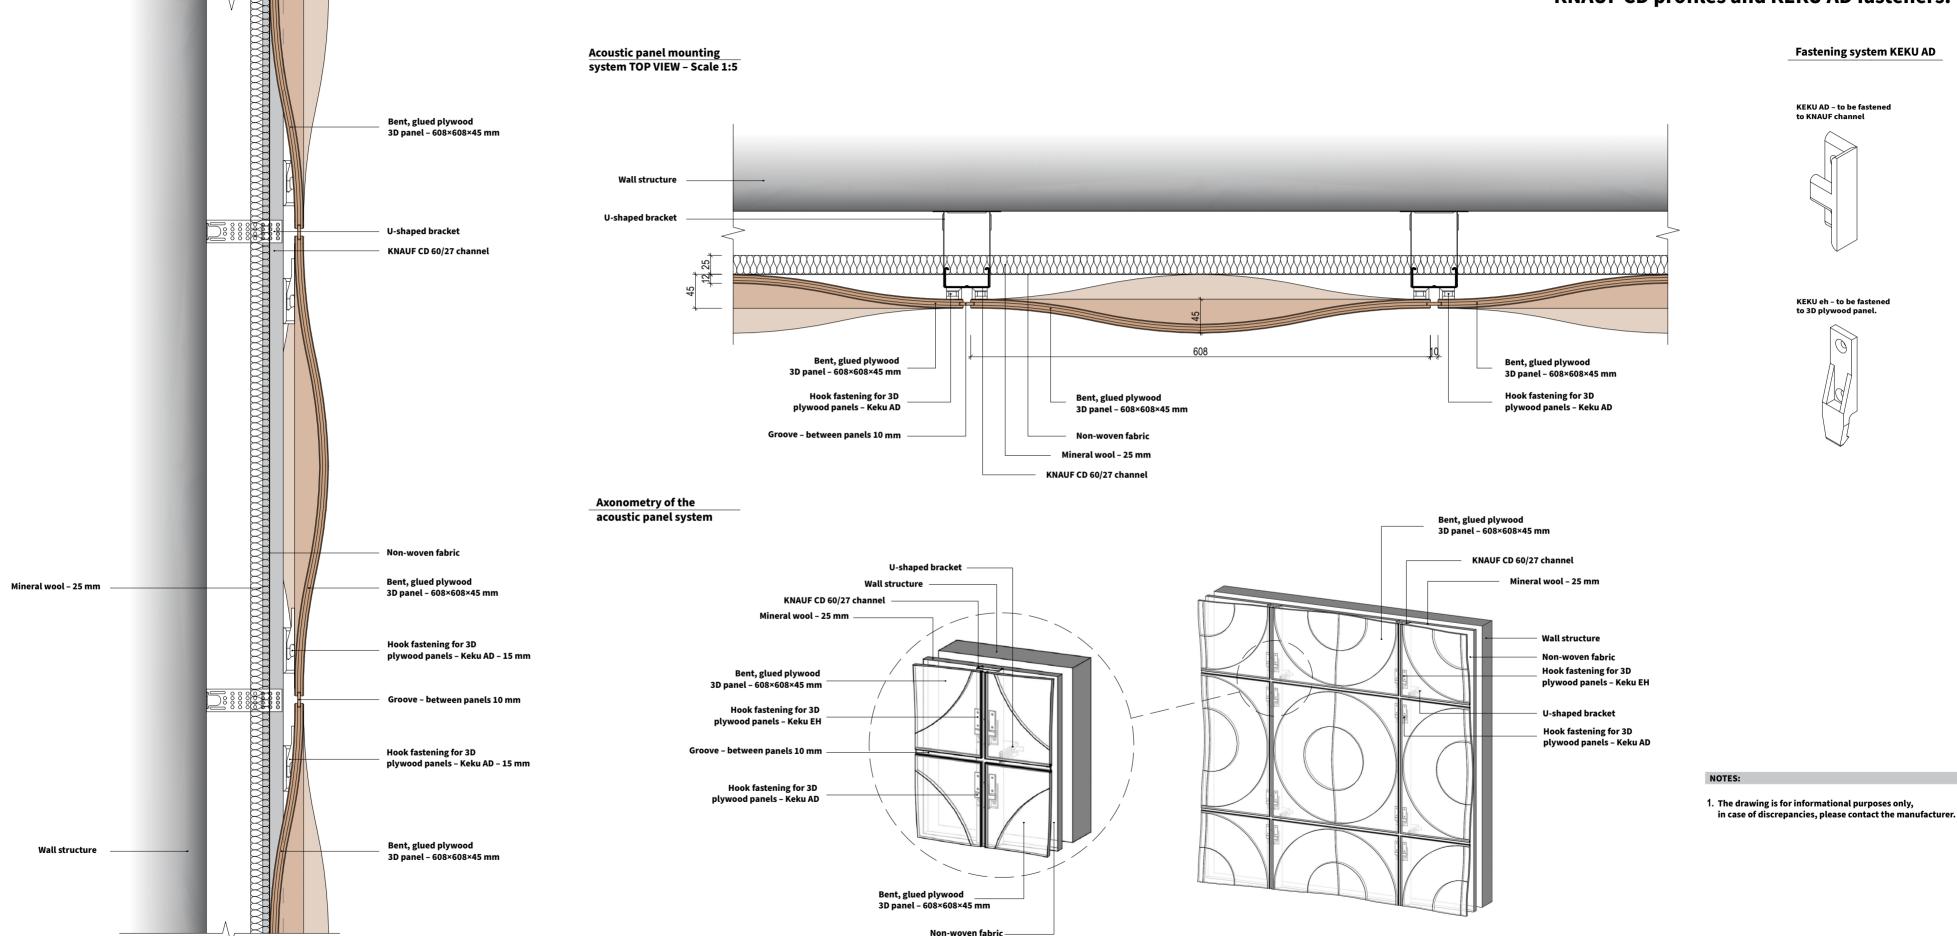

Non-woven fabric-

Installation method for 3D panels using KNAUF CD profiles and KEKU EH fasteners.

