

Installation of decorative panels directly onto the wall surface using KEKU AD fasteners.

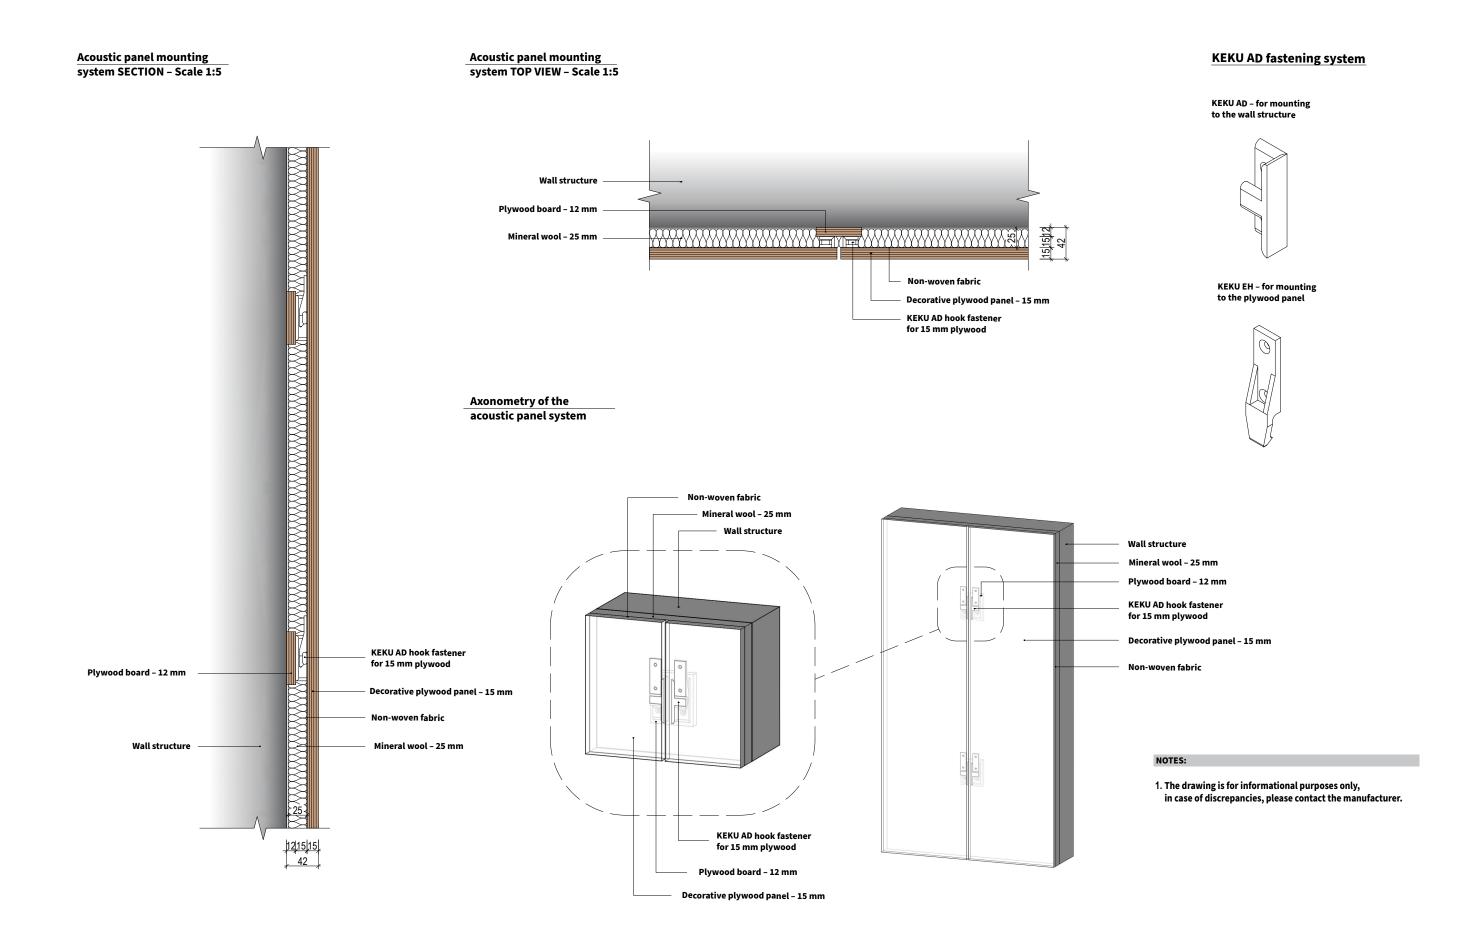


Installation of decorative panels directly onto the wall surface using KEKU AD fasteners.

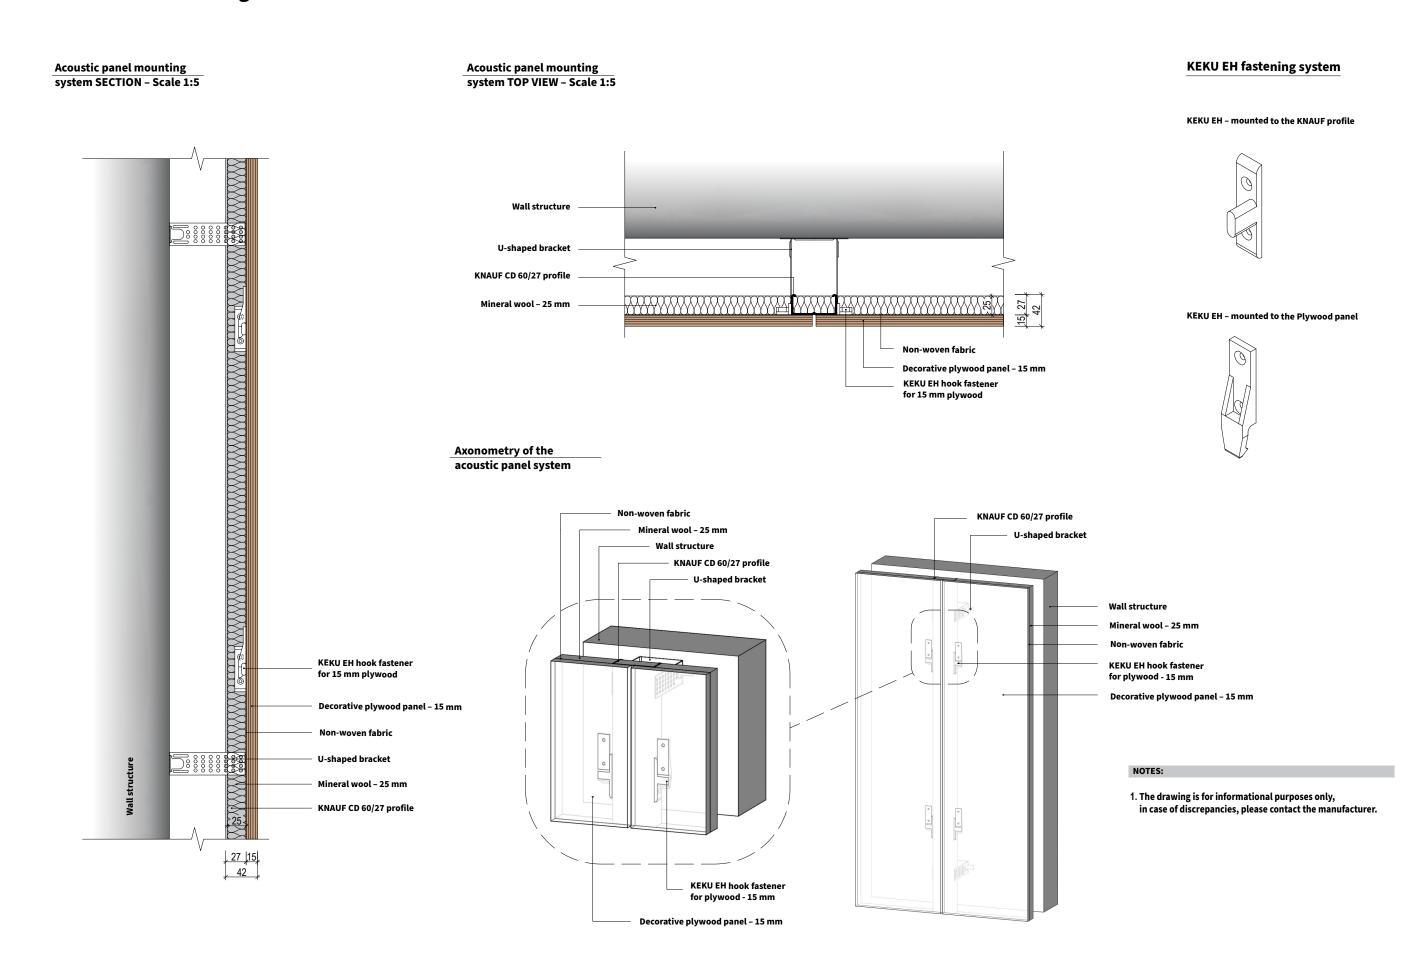

Installation method for decorative panels using KNAUF CD profiles and KEKU AD fasteners

KEKU AD fastening system Acoustic panel mounting Acoustic panel mounting system SECTION - Scale 1:5 system TOP VIEW - Scale 1:5 KEKU AD - mounted to the KNAUF profile Wall structure **U-shaped bracket** KNAUF CD 60/27 profile Mineral wool – 25 mm KEKU EH - mounted to the Plywood panel Non-woven fabric Decorative plywood panel – 15 mm KEKU EH hook fastener for 15 mm plywood **Axonometry of the** acoustic panel system Non-woven fabric KNAUF CD 60/27 profile Mineral wool – 25 mm U-shaped bracket Wall structure KNAUF CD 60/27 profile U-shaped bracket **Wall structure** Mineral wool - 25 mm KEKU AD hook fastener **KEKU AD hook fastener** for plywood -15 mm for plywood - 15 mm Decorative plywood panel - 15 mm Decorative plywood panel – 15 mm Non-woven fabric **U-shaped bracket** NOTES: Mineral wool - 25 mm 1. The drawing is for informational purposes only, KNAUF CD 60/27 profile in case of discrepancies, please contact the manufacturer. 27 |15|15 **KEKU AD hook fastener** for plywood -15 mm Decorative plywood panel - 15 mm

Decorative panel installation directly on the wall surface using KEKU EH fasteners

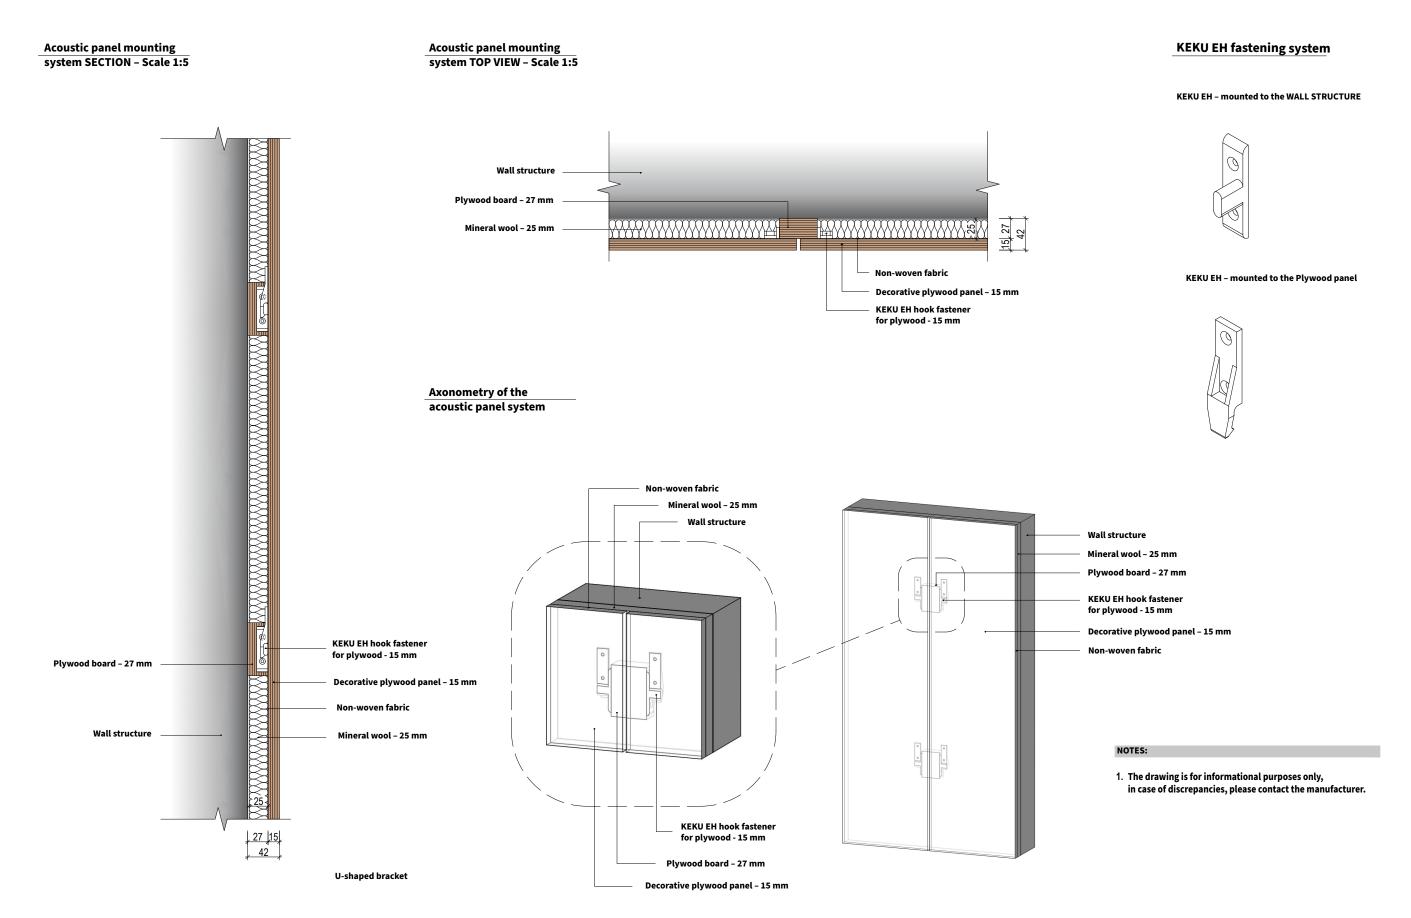

KNAUF CD 60/27 profile